

# I-BIKE


ATS-XH18 display operation manual







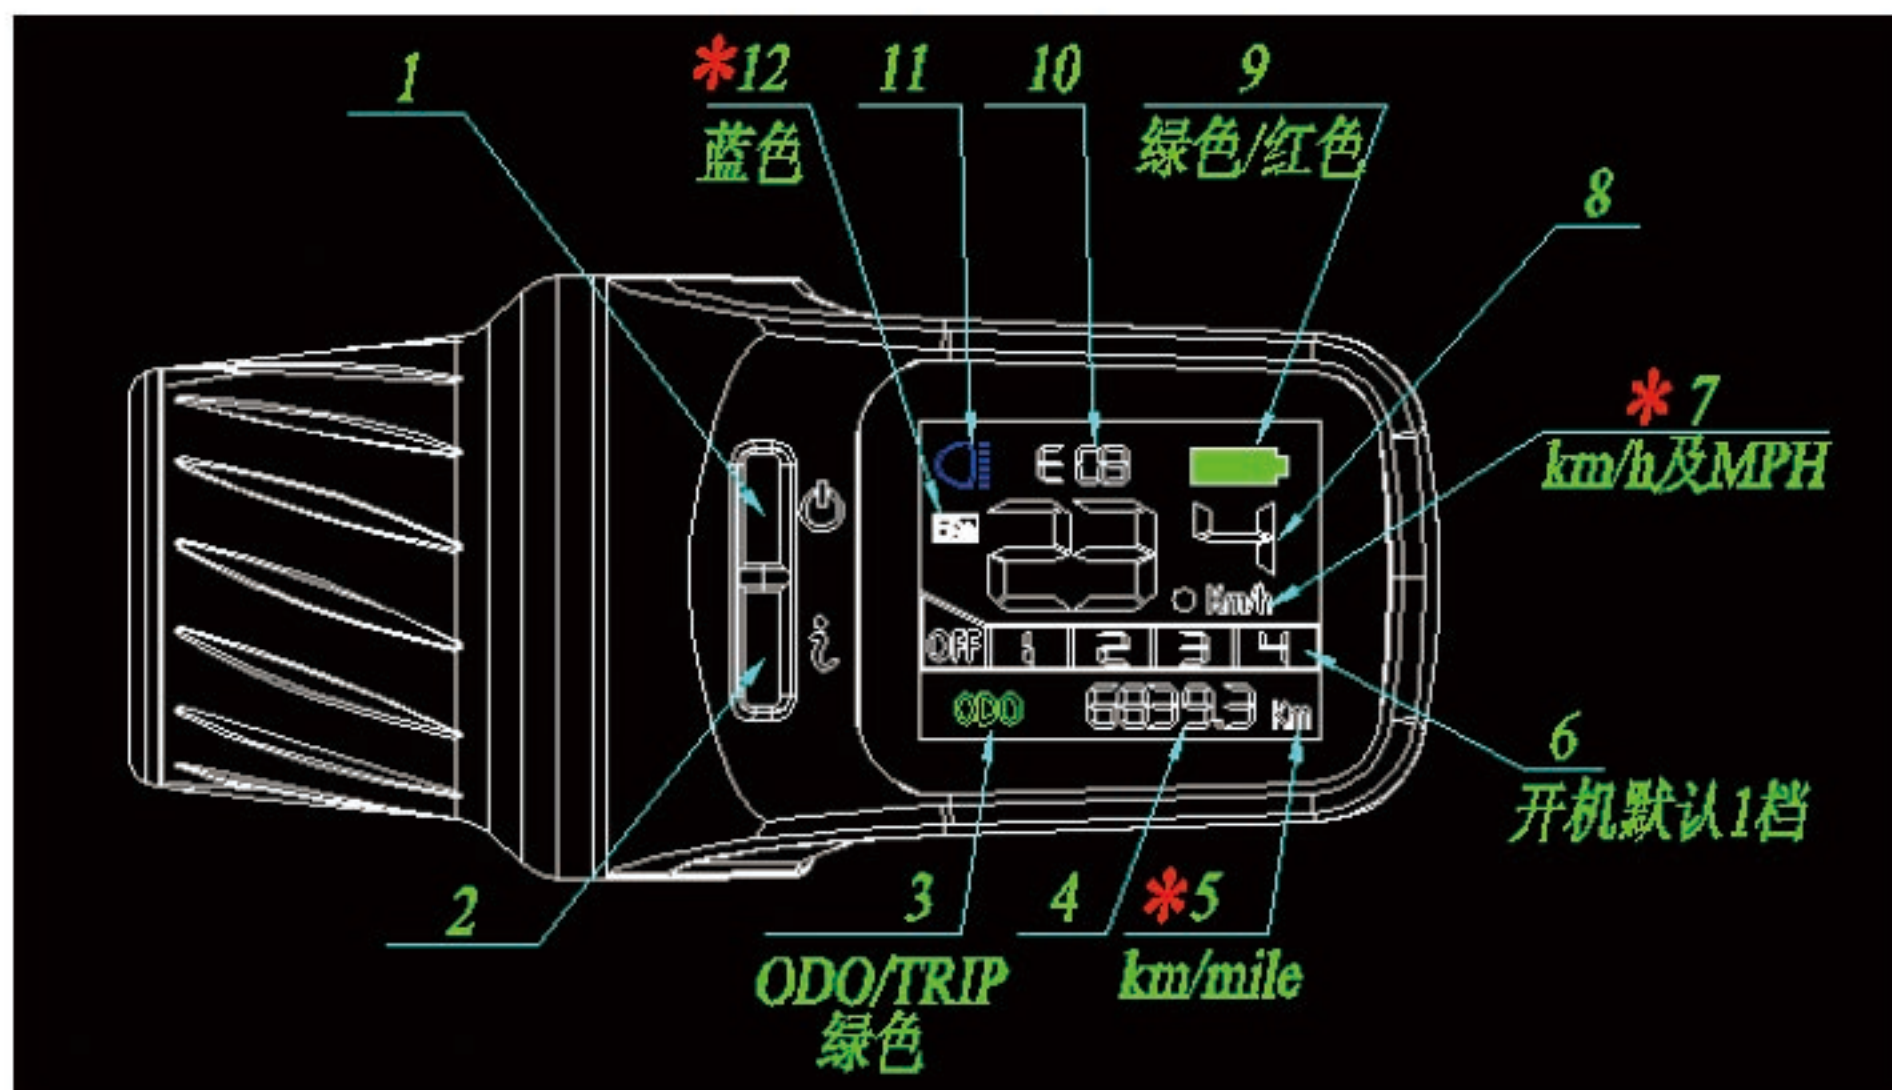

Suzhou I-bike Tech Co, Ltd.

all rights reserved.


1. Turn on the display for operating interface





1.  Power button/front light button. Press  to turn on the display. Interface starts with “welcome” and then gets into operation interface. Long press  to turn off. Screen shut off after showing “thank you”.


2.  Press to switch between single mileage and total mileage.
3. ODO is total mileage. TRIP is single mileage. Default is ODO.
4. Mileage figure
5. Mileage unit Km/h or Mile/h. (MPH)
6. **Power assist Levels.** Switch throttle for levels change from 1 to 4.
7. **Speed indicator.** Default unit is Km/h. Press  and  simultaneously for set-up to switch between Km and Mile.







8. **Speed indicator figure.**
9. **Power indicator.** Green color for normal and red color for power shortage.
10. **Erro indicator.** Erro code for specific malfunction. Red color
11. **Front light indicator.** Default is close. Press  to turn on/off front light.
12. **Walk assisance (6km).** Default is close. Turn throttle in-wards for 2 seconds to turn on Walk assistance function. Loose the throttle to close.

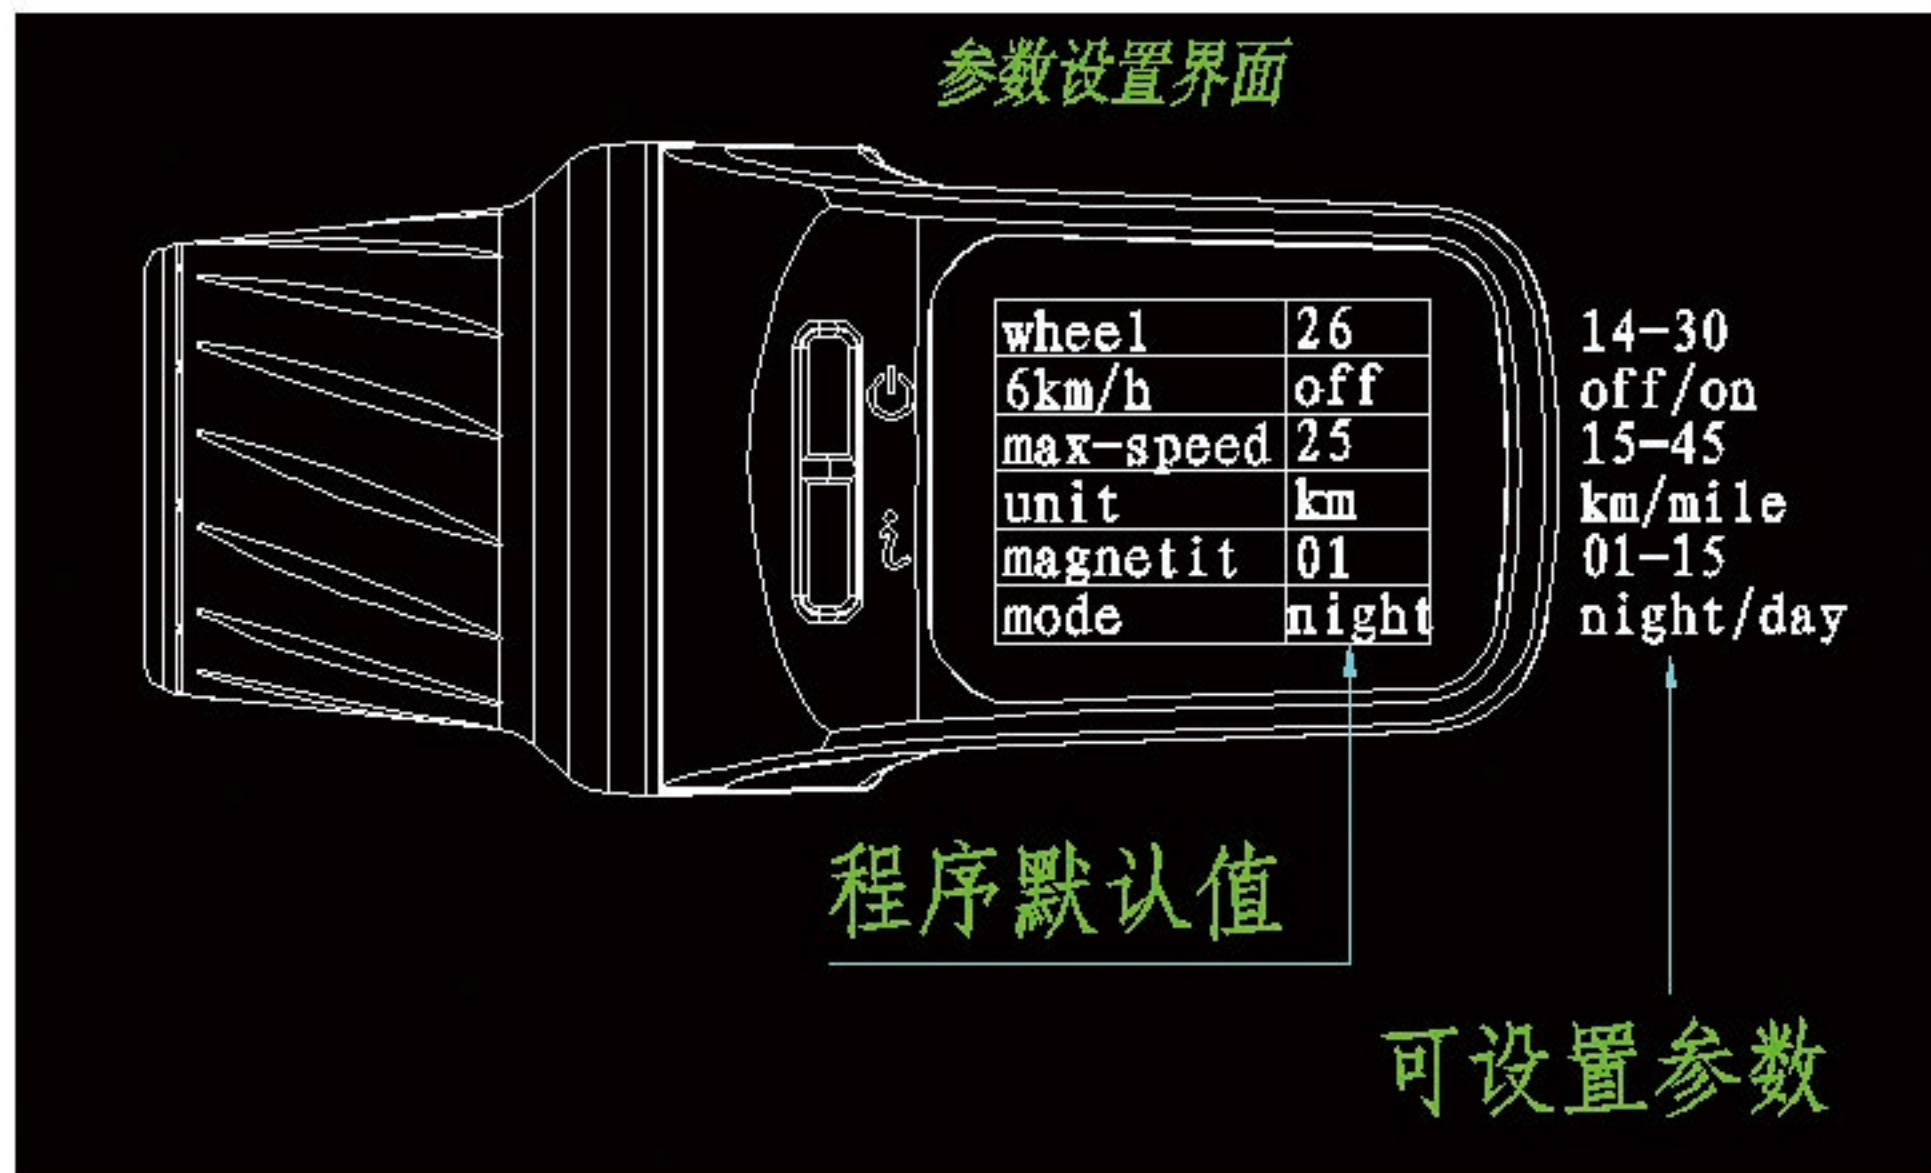Note: Set-up to be done for \* items.

2. At operating interface, press  and  simultaneously for set-up.



1. Enter set-up interface.

2. Press  to back and return to operation interface. Press  to set up.
3. For example: After entering the set-up interface, default is to set up wheel sizes. Switch throttle to increase or reduce size figure. Press  to set up Walk assistance function (6km/h). Switch throttle for on/off choices. Press  to return operation interface.

6km/h	off/on
unit	km/mile
mode	night/day

These three set up using throttle to switch choices.

**Night/day** choice for different back lights.